



Steamfast™

MODEL
—
SF-710



MINI STEAM IRON
OWNER'S GUIDE

IMPORTANT SAFETY INSTRUCTIONS

This owner's guide and any additional inserts are considered part of the product. They contain important information about safety, use and disposal. Before using the product, please familiarize yourself with all operating and safety instructions. Please keep all documents for future reference and pass these documents on, together with the product, to any future owner. See steamfast.com to view, download and print the most current version of these instructions.

INTENDED USE: This product is intended to be used indoors for ironing and garment steaming in the United States. This product is not intended for commercial or industrial use. The manufacturer assumes no responsibility for damage or injury due to unauthorized use or product modification. Failure to follow these directions will void the product warranty.

WARNING: Risk to Children and Impaired Persons

- Supervision is required during the installation, operation, cleaning and maintenance of this product by children age 12 and younger and anyone with reduced physical, sensory or mental capabilities. Children should be supervised to ensure that they do not play with the appliance, its parts and packaging material.

Directions to reduce risk of fire, electrical shock, and injury:

When using your appliance, basic precautions should always be followed, including the following:

- Read all instructions before use.
- Use caution when handling this steam iron. Burns could occur from touching hot metal parts, hot water, or steam. Use special care to avoid contact with hot water when turning the

product upside down to empty the reservoir.

- To reduce the risk of contact with hot water, test whether steam is ready before each use while carefully holding the product away from your body. If no steam appears, wait a few more minutes and test again. Do not look into the appliance, use your hands or other objects to check for steam.
- Do not leave appliance unattended while connected.
- To reduce the risk of electric shock, do not immerse the appliance in water or other liquids.
- When placing the iron on its stand, ensure the surface on which the stand is placed is stable.
- Unit is only meant to be used with recommended accessories. Using other types of attachments may cause damage to unit or injury.
- Always disconnect appliance from electrical outlet when filling with water or emptying, and when not in use.
- Always turn the iron OFF before plugging in or unplugging the iron from the electrical outlet.
- Do not allow cord to touch hot surfaces. Let appliance cool completely before putting away. Wrap cord with supplied "hook and loop" fastener when storing.
- Never yank cord to disconnect from outlet. Instead, grasp just the plug and pull to disconnect.
- Do not operate appliance with a damaged cord, or if the appliance has been dropped or damaged. To reduce the risk of electric shock, do not disassemble or attempt to repair the appliance. All repairs must be performed by a qualified service professional. Incorrect reassembly or repair could cause a risk of fire, electric shock, or injury when the appliance is used.
- If Heating Indicator Light does not illuminate when Temperature Control Dial is turned to a selected heat setting,

unit is not operating normally. Immediately unplug and have unit serviced by qualified service personnel.

- When filling Water Tank, only water should be used in unit
 - other cleaning agents could damage unit or cause injury.Distilled or de-mineralized water is highly recommended, in order to minimize potential build-up of mineral deposits. Do not overfill unit.
- Do not attempt to use steam function without properly filling Water Tank.
- To reduce risk of contact with hot water emitting from steam vents, check appliance before each use by positioning it away from body and pressing Steam Burst Button. Do not operate unit if steam vents are blocked.
- Do not allow power cord to touch hot surfaces (such as Ironing Plate) during use.
- Wrap cord with supplied "hook and loop" fastener when storing.
- Always allow unit to cool completely (at least 30 minutes) before storing. Prop unit upright when cooling, to avoid heat damage to surfaces.
- The iron must be used and rested on a stable surface.
- A loose fit between wall outlet (receptacle) and plug may cause overheating and distortion of the plug. Discontinue use of the product in this outlet. Contact a qualified electrician to replace loose or worn outlets.
- To reduce the likelihood of circuit overload, do not operate another high wattage appliance on the same circuit.
- If an extension cord is absolutely necessary, a 15 amp rated cord should be used. Cords rated for less amperage may overheat. Care should be taken to arrange the cord so that the cord cannot be pulled or tripped over.

-
- This appliance has a polarized plug (one blade is wider than the other.) To reduce the risk of electrical shock, this plug is intended to fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.
 - The iron is not intended for regular use (for travel irons).
 - Use appliance only for its intended use.

WARNING: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Please refer to our website for the most current version of our owner's guide.

READ AND SAVE THESE INSTRUCTIONS

 




Steamfast™

Product Information

UNIT FEATURES & ACCESSORIES

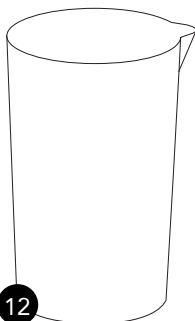- 1 Ironing Plate
- 2 Main Body
- 3 Heating Indicator Light
- 4 Water Tank Cap
- 5 Water Tank View Window
- 6 Water Tank
- 7 Continuous Steam Switch
- 8 Temperature Control Dial
- 9 Steam Burst Button
- 10 Handle
- 11 Handle Collapse Lever
- 12 Fill Cup



-
1. The Ironing Plate is the heated, non-stick surface that is used to press fabrics, remove wrinkles and create creases.
 2. The Main Body contains the unit's internal heating components
 3. The Heating Indicator Light illuminates when the Ironing Plate is heating. It will turn off when the set temperature is reached.
 4. The Water Tank Cap covers the Water Tank fill hole. The Cap will "click" when completely shut.
 5. The Water Tank View Window lets you monitor the level of water in the Water Tank. The unit must be sitting upright to correctly read the water level.
 6. The Water Tank is designed to hold a maximum of 1.00oz (29.5mL) of water.
 7. The Continuous Steam Switch controls the unit's continuous steam feature. When Switch is in the  position, continuous steam is inactivated. When Switch is in the  position, continuous steam is activated
 8. The Temperature Control Dial is turned to select the various Ironing Plate heat settings based on your fabric and to turn the unit OFF.
 9. Press and release the Steam Burst Button to release a powerful, quick burst of steam
 10. The Handle is designed for easy control and navigation of the unit
 11. The Handle Collapse Lever is a nice space-saving feature when storing your unit.
 12. The Fill Cup is designed to help you easily and consistently fill the Water Tank. **Note: filling water to MAX line on the Fill Cup will overflow the Water Tank.**



FILLING WATER TANK (FOR STEAM IRONING)

1. Turn off and unplug unit.
2. Place unit on a flat surface and stand the iron upright.
3. Fill the Fill Cup with up to 1.00 oz (29.5mL) of water. Do not fill the Fill Cup to the MAX fill line. It will overflow the Water Tank.

NOTE: In order to extend the life of your unit and keep it functioning at it's maximum potential, it is highly recommended that distilled or de-mineralized water be used in Water Tank.

4. Open the Water Tank Cap. Pour water from Fill Cup into the Water Tank. Close Water Tank Cap. The Cap will "click" when completely shut.



While steam-ironing, the Water Tank Windows let you monitor the water level in the Water Tank. When the water level becomes low:

1. Turn off and unplug unit. Allow to cool for at least 5 minutes.
2. Follow **STEPS 2-4** above.
3. Plug power cord back in and resume ironing as usual.

OPERATING UNIT

 
CAUTION: Do not operate when handle is in collapsed position.

STEAM IRONING

1. Follow Filling Water Tank procedure on pg 6.
2. Plug power cord into a convenient electrical outlet.
3. Turn Temperature Control Dial to your desired ironing plate heat setting. The desired setting should align with the Heating Indicator Light.
4. When Heating Indicator Light turns off, the sole plate has reached its set temperature.
5. To produce Continuous Steam, set the Temperature Control Dial between Cotton and MAX. Once set temperature is reached, move the Continuous Steam Switch to  position. Continuous steam will begin to emit from ironing plate. To stop continuous steam, move Continuous Steam Switch to  position.

NOTE: Water may leak from ironing plate if too low a setting has been selected. Continuous Steam is only available when the Temperature Control Dial is set to the heat settings between Cotton and MAX.

To produce a quick, powerful burst of steam, set the Temperature Control Dial to your desired setting. Once the Heating Indicator Light has turned off, direct the ironing plate at your fabric and press the Steam Burst button. Steam Burst is available on all ironing plate heat settings.

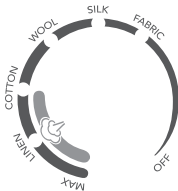

DRY IRONING


IMPORTANT: Make sure Continuous Steam Switch is in the  position to avoid water leakage.

1. Plug power cord into a convenient electrical outlet.
2. Turn Temperature Control Dial to desired ironing plate setting. The desired setting should align with the Heating Indicator Light.

NOTE: It is recommended to start with lower temperatures first, as high settings designed for heavy materials can damage delicate fabrics.

3. When Heating Indicator Light turns off, Ironing Plate is heated and ready for use.

NOTE: During use, Heating Indicator Light will cycle on and off as unit works to maintain a constant temperature. You may continue to iron while Light cycles.

Once all ironing tasks are finished, immediately turn Temperature Control Dial to OFF position. Be sure to set Continuous Steam Switch to  position to avoid water leakage. Place unit upright to cool the ironing plate.





CLEANING & STORAGE

1. Turn Temperature Control Dial to OFF position. Unplug power cord.
2. Place unit upright to allow Ironing Plate to cool for at least 30 minutes.
3. Open Water Tank Cap and drain any remaining water into a sink or tub. Close Cap when finished.
4. Wipe Main Body and Ironing Plate with a soft cloth lightly moistened with water.
 - **DO NOT clean Ironing Plate with detergents or descalers.**
 - **DO NOT clean Ironing Plate with abrasive or corrosive products.**
 - **DO NOT submerge unit or hold unit under running water.**
5. (Optional) For space-saving option, pull and release Handle Collapse Lever while pressing Handle down.
6. Wrap cord with supplied "hook and loop" fastener when storing.
7. Place unit and Fill Cup in cool, dry location.

MINERAL BUILD-UP

1. Follow **STEPS 1-3** under **CLEANING & STORAGE** section above; however, leave Water Tank Cap open.
2. Make a mixture of 0.5 oz. distilled water and 0.5 oz. vinegar.
3. Using included Measuring Cup, pour water-vinegar solution into Water Tank. Close Water Tank Cap.
4. Follow normal steam ironing procedure, as outlined on Page 9. Allow unit to steam out full contents of Water Tank. When finished, lock Steam Button in lowered position and unplug unit.
5. Allow to cool for 5 minutes, then refill Water Tank with fresh distilled water. Repeat **STEP 4** until vinegar odor dissipates.
6. Store unit as normal.



PROBLEM	POSSIBLE CAUSE & SOLUTION
Unit fails to heat up.	Unit is not plugged in. Plug power cord into electrical outlet.
	Household circuit breaker / ground fault interrupter has tripped or blown a fuse. Reset circuit breaker / ground fault interrupter, or replace fuse. For assistance, contact a licensed electrician.
	Temperature Control Dial has not been turned to a heat setting.
Unit is leaking water.	The Continuous Steam Switch is in this  position, but Temperature Control Dial is not set to high enough heat setting. Refer to Steam Ironing section for further instructions.
	Water tank is overfilled. Do not fill past MAX line.
	There is mineral build-up. Refer to MINERAL BUILD-UP section for further instructions.
Unit is not producing continuous steam	The Continuous Steam Switch is not set in the correct position. Ensure it is set to  position.
	The Temperature Control Dial is not set to high enough heat. Refer to Steam Ironing section for further instructions.

CONSUMER SERVICES

For problems with your Handheld Fabric Steamer, please refer to the troubleshooting guide located above. Additional inquiries should be directed to our consumer support services through our Web site, steamfast.com.

If you do not have internet access, you may also contact our Consumer Service Department by telephone, at **1-800-711-6617**.

NOTE: In order for our Consumer Service representatives to help you as quickly and efficiently as possible, please have the following information ready before calling:

- Purchase information (where and when you purchased this product)
- Copy of purchase receipt / proof of purchase
- Product serial number (located near electrical specification label on bottom of unit)

For information regarding your 2 Year Limited Warranty, refer to Page 13 of this manual.



Steamfast™

Warranty Information

2-YEAR LIMITED WARRANTY

Steamfast, a division of Vornado Air, LLC. Steamfast warrants to the original consumer or purchaser this Steamfast ("Product") is free from defects in material or workmanship for a period of two (2) years from the date of purchase. If any such defect is discovered within the warranty period, Vornado, at its discretion, will repair or replace the Product at no cost.

For warranty service: Call 1-800-711-6617 or email consumerservice@steamfast.com to obtain a Return Authorization ("RA"). Please have or include your Product's model number and serial number, as well as your name, address, city, state, Zip code, email, and phone number when contacting Vornado for warranty service. To file a contactless warranty claim, visit <https://www.steamfast.com/contact>

After receiving the RA, ship your Product to: Vornado Air LLC Attn: Warranty & Repair 415 East 13th Street, Andover, KS 67002. For your convenience, please have your model number and serial number when contacting Vornado with service inquiries. To ensure proper handling, packages must be clearly marked with the RA number. Packages not clearly marked with the RA number may be refused at the receiving dock. Please allow 2-3 weeks for warranty service and return of your Product after the Product is received.

This warranty does not apply to defects resulting from abuse of the Product, modification, alteration, mishandling, improper maintenance, commercial use or repair or service of the Product by anyone other than Vornado; damages which occur in shipment or are attributed to acts of God. Improper product use, which includes using an external device that alters or converts the voltage or frequency of electricity, or shipping a Vornado product to a country not intended for use will void all warranties. Any unauthorized product modification, repair by unauthorized repair center or use of non-approved replacement parts is not recommended and any consequences will not be covered by support services or product warranties.

The product warranty will be honored only on models that are being used in the country intended. REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER. VORNADO SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT. EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED IN DURATION TO THE DURATION OF THIS WARRANTY. Some states do not allow the exclusion or limitation of incidental or consequential damages, or allow limitations on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may have other rights that vary from state to state. The manufacturer assumes no responsibility for damage or injury caused by failure to follow these instructions, improper product use or unauthorized product modifications. Any such actions will invalidate the product warranty.

All company names and product names are trademarks of their respective owners. ©All rights reserved. All technical information, data and instructions for the installation, connection and

operation contained in these instructions for use correspond to the latest available information at time of printing. The contents of this manual may differ slightly from the actual product. Observe any additional supplements.

 
© 2022 Vornado Air, LLC • Andover, KS 67002

Specifications subject to change without notice. Steamfast® is a trademark owned by Vornado Air, LLC. Patented. US Pat. No. 7,062,870 B1

Manufactured in China.

Steamfast Consumer Service

W: steamfast.com • P: 1-800-711-6617 • E: consumerservice@steamfast.com

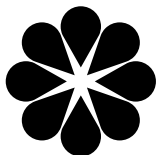

SteamfastTM

Steamfast

415 East 13th Street, Andover, KS 67002

1-800-711-6617 | steamfast.com | consumerservice@steamfast.com

T710-004 R-, V01