

# Steamfast™

MODEL: SF-767



**CORDLESS STEAM IRON**  
OWNER'S GUIDE

---

# READ ALL INSTRUCTIONS BEFORE USING IMPORTANT SAFETY INSTRUCTIONS

This owner's guide and any additional inserts are considered part of the product. They contain important information about safety, use, and disposal. Before using the product, please familiarize yourself with all operating and safety instructions. Please keep all documents for future reference and pass these documents on, together with the product, to any future owner. See [steamfast.com](http://steamfast.com) to view, download, and print the most current version of this owner's guide.

**When using an iron, basic precautions should always be followed, including:**

**INTENDED USE:** Use appliance only for its intended use. This product is intended to be used indoors for steam ironing in the United States. This product is not intended for commercial or industrial use. The manufacturer assumes no responsibility for damage or injury due to unauthorized use or product modification. Failure to follow these directions will void the product warranty.

 **WARNING: Risk to Children and Impaired Persons**

Supervision is required during the installation, operation, cleaning and maintenance of this product by children 12 years of age and younger and anyone with reduced physical, sensory or mental capabilities. Children should be supervised to ensure that they do not play with the appliance, its parts and packaging material.

- Close supervision is required for any appliance used by or near children and pets. Do not leave the iron unattended while the iron is connected or on an ironing board.

 **WARNING: BURN HAZARD - To reduce the risk of burns or injury to persons, observe the following:**

- Use caution when handling this steam unit. Burns could occur from touching hot metal parts, hot water, or steam. Use caution to avoid contact with hot water when turning the product upside down to empty the reservoir.
- Avoid contact with the hot metal ironing plate.
- Do not point steam vents at people or pets as serious injury or damage can occur.
- Do not iron or steam articles while wearing. Remove article before using this appliance.
- To reduce the risk of contact with hot water emitting from steam vents, check

---

appliance before each use by holding it away from body and operating steam button. Do not operate unit if steam vents are blocked.

** WARNING - To avoid damage to the unit or power cord, and to reduce risk of fire, electrical shock and injury to persons, observe the following:**

- Do not use the iron if it has been dropped, if there are visible signs of damage, or if it is leaking. Shock, fire, or injury may occur.
- Do not let the cord touch hot surfaces. Let the iron cool completely before putting the iron away. Do not wrap cord around the unit, use the cable tie provided for storage.
- Do not use power cord as handle, allow it to hang over edge of counters, or be crimped or closed in doors.
- The iron must not be left unattended while it is plugged into any power outlet.
- Always turn the iron OFF before plugging or unplugging the iron from the electrical outlet. Never pull on the cord to disconnect the iron from the electrical outlet; instead, grasp the plug and pull on the plug to disconnect the iron.
- A loose fit between wall outlet (receptacle) and plug may cause overheating and distortion of the plug. Discontinue use of the product in this outlet. Contact a qualified electrician to replace loose or worn outlets.
- To reduce likelihood of circuit overload, do not operate another high wattage appliance on this same circuit.
- If an extension cord is absolutely necessary, a cord with an ampere rating equal to or greater than the maximum rating of the iron shall be used. A cord rated for less amperage can result in a risk of fire or electric shock due to overheating. Care shall be taken to arrange the cord so that it cannot be pulled or tripped over.
- This appliance has a polarized plug (one blade is wider than the other.) To reduce the risk of electrical shock, this plug is intended to fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.
- To avoid the risk of electric shock, do not immerse the iron in water or other liquids.
- Always disconnect the iron from the electrical outlet before filling the iron with water, emptying the water from the iron, and when the iron is not in use. Do not open water tank cap during use.
- Only use distilled water to fill unit. Do not use cleaning agents or other substances to fill unit. Cleaning agents and other substances could result in injury or damage to the unit.
- The iron must be used on a flat stable surface. The iron must only be used with the base provided. When placing the iron on its base, ensure that the surface on which the base is placed is stable.
- Always allow unit to cool completely (at least 30 minutes) before storing. Place unit on base when cooling, to avoid heat damage to surfaces.

---


 
**⚠️ SERVICING WARNING—To reduce risk of fire, electrical shock and injury to persons, observe the following:**

- Do not operate the iron with a damaged cord, or if the appliance has been dropped or damaged. To reduce the risk of electric shock, do not disassemble or attempt to repair the appliance, take it to a qualified service person for examination and repair. Incorrect reassembly or repair could cause a risk of fire, electric shock, or injury to persons when the appliance is used.
- If Heating Indicator Light does not illuminate when Temperature Control Dial is turned to a selected heat setting, unit is not operating normally. Immediately unplug and have unit serviced by qualified service personnel.
- Clean your product regularly, only as is instructed in this manual. Prior to cleaning, turn off the power on your product and unplug. Do not use gasoline, thinners, solvents, ammonias or other chemicals for cleaning. Refer to the cleaning instructions provided.

## **SAVE THESE INSTRUCTIONS**

# FEATURES

---

- 1 IRONING PLATE**  
Heated, non-stick surface that is used to press fabrics, remove wrinkles and create creases.
- 2 MAIN BODY**  
Contains the unit's internal heating components.
- 3 BASE**  
Works as a docking and reheating station.
- 4 CARRY CASE**  
Provides a convenient, portable option for moving and storing the Cordless Steam Iron.
- 5 HEATING INDICATOR LIGHT**  
Will turn off when the Ironing Plate's set temperature is reached.
- 6 WATER TANK CAP**  
Covers the Water Tank fill hole. The Cap will "click" when completely shut.
- 7 WATER TANK**  
Designed to hold a maximum of 6.09 oz (180 ml) of water.
- 8 CONTINUOUS STEAM SWITCH**  
Controls the unit's continuous steam feature. When Switch is in the  position, continuous steam is inactivated. When Switch is in the  position, continuous steam is activated.
- 9 STEAM BURST BUTTON**  
When pressed, provides a quick, powerful burst of steam for tough wrinkles.
- 10 STEAM MIST BUTTON**  
Used for draining water and is the location on the back of the main unit.
- 11 STEAM MIST OUTLET**  
The Spray Mist Outlet is where the water exits for the Spray Mist feature.
- 12 HANDLE**  
Designed for easy control and navigation of the unit.
- 13 TEMPERATURE CONTROL DIAL**  
Select the various Ironing Plate heat settings based on your fabric and to turn the unit OFF.
- 14 FILL CUP**  
Designed to help you easily and consistently fill the Water Tank.
- 15 POWER CORD STORAGE**  
Conveniently store the power cord in the Power Cord Storage located in the base (not shown).

# FEATURES

---



# HOW TO USE

---

## FILLING WATER TANK (FOR STEAM IRONING)

1. Turn off iron and unplug Base.
2. Place unit on a flat surface and open Water Tank Cap.
3. Use provided fill cup to fill Cordless Iron with water to MAX fill line on Water Tank. Do not overfill unit.

**NOTE: In order to extend the life of your unit and keep it functioning at it's maximum potential, it is highly recommended that distilled or de-mineralized water be used in Water Tank.**

**Using tap water could result in mineral buildup which could block the steam vents. This will reduce the effectiveness of this unit and may cause unit to spit or spurt hot water. Follow cleaning instructions provided.**

4. When finished filling Water Tank, close Water Tank Cap. Cap will "click" when completely shut.

### **When the water level becomes low:**


1. Turn off iron and unplug base. Allow to cool for at least 5 minutes.
2. Follow STEPS 2-4 above.
3. Plug power cord back in and resume ironing as usual.

## OPERATING UNIT

Your SF-767 Cordless Iron comes with a built-in Auto-Off Feature. When the Cordless Iron is placed on the Base and powered on, the iron will automatically shut off if not removed from Base after 8 minutes.

**Always place Iron securely on the Base when not in use. Do not rest Iron on other surfaces or attempt to stand Iron upright.**

 **Burn Hazard. Do NOT touch the Ironing Plate or surrounding area.**

 **Discontinue use if iron has been dropped and shows visible damage. If visible damage occurs, do not return iron to base while base is powered on.**

## STEAM IRONING

1. Follow FILLING WATER TANK procedure.
2. Plug power cord into a convenient electrical outlet.
3. Set the Cordless Iron on the Base, ensuring back of Iron sits flush against base.
4. When Heating Indicator Light turns off, the sole plate has reached it's set temperature.


**NOTE: It is recommended to start with lower temperature first, as high settings designed for heavy material can damage delicate fabrics.**

FABRIC	TEMPERATURE CONTROL	TEMPERATURE REQUIREMENT
Silk	●	Low Temperature
Wool	● ●	Medium Temperature
Cotton, Linen	● ● ●	High Temperature

#### 5. To Produce Steam

- For Continuous Steam: Once the Heating Indicator Light has turned off (indicating selected Ironing Plate temperature has been reached), remove the Cordless Iron from the base and move the Continuous Steam Switch to the ☁ position. After a few seconds, the unit will automatically begin to emit steam from the Ironing Plate.
- For Steam Burst: Once the Heating Indicator Light has turned off (indicating selected Ironing Plate temperature has been reached, remove the Cordless Iron from the base, leave the Continuous Steam Switch in the ☁ position, and press the Steam Burst button.

**NOTE:** Unit is designed to steam horizontally. Steam flow will stop whenever unit is in vertical upright position. If unit is leaking excessively in vertical position, check that steam button is disengaged.

 **CAUTION: Burn Hazard.** Hot steam may temporarily vent when the unit is positioned vertically.

**NOTE: Steam can only be produced when the Ironing Plate temperature is set at ● ● or ● ● ●. Steam cannot be produced at the lowest temperature setting.**

#### 6. Continue with steam ironing tasks.

**IMPORTANT: The Ironing Plate will maintain its set temperature for an approximate 30 seconds. After 30 seconds, set the Cordless Iron back on the Base to reheat the Ironing Plate. This will take approximately 7 seconds. The Heating Indicator Light will turn on when the Cordless Iron is set on the base and after approximately 7 seconds, the light will turn off indicating the Cordless Iron is reheated and ready for use again.**

## DRY IRONING

1. Plug power cord into a convenient electrical outlet.
2. Set the Cordless Iron on the Base, ensuring back of Iron sits flush against base.
3. When Heating Indicator Light turns off, the Ironing Plate has reached its set temperature. Be sure to set Continuous Steam Switch to ☁ position to avoid water leakage.

**NOTE: Follow the fabric guidance chart to select the appropriate Sole Plate temperature for your fabric.**

#### 4. Continue with steam ironing tasks.



---


**IMPORTANT:** The Ironing Plate will maintain it's set temperature for an approximate 30 seconds. After 30 seconds, set the Cordless Iron back on the Base to reheat the Ironing Plate. This will take approximately 7 seconds. The Heating Indicator Light will turn on when the Cordless Iron is set on the base and after approximately 7 seconds, the light will turn off indicating the Cordless Iron is reheated and ready for use again.

# STORAGE & CARE

---

## PROPER STORAGE

Preparing your unit for storage is quick and simple. When you have completed your tasks, follow the steps listed below.


1. Turn Temperature Control Dial to OFF position. To eliminate the potential for water leakage, move Continuous Steam Switch to OFF  position. Place unit securely on the Base.
2. Unplug the power cord. Allow unit to cool for at least 30 minutes.
3. Once cooled, open Water Tank Cap and drain any remaining water into a sink or tub. Close Cap when finished.
4. Wipe Main Body and Ironing Plate with a soft cloth lightly moistened with water.


- **DO NOT clean Ironing Plate with detergents or descalers.**
- **DO NOT clean Ironing Plate with abrasive or corrosive products.**
- **DO NOT submerge unit or hold unit under running water.**

5. If desired for storage or moving Cordless Iron, place unit on the base and securely connect the Carry Case to Base. The clips will “click” into place when securely fastened.
6. Place unit in cool, dry location.



## MINERAL BUILD-UP

A common maintenance need for steam appliances is the removal of build-up caused by high mineral content in many municipal water supplies. This mineral build-up may cause the unit to spit water, limit the effectiveness and reduce the life of your steamer.

1. Follow STEPS 1-3 under CLEANING & STORAGE section above; however, leave Water Tank Cap open.
2. Make a mixture of 0.5 oz. distilled water and 0.5 oz. vinegar.
3. Using included Measuring Cup, pour water-vinegar solution into Water Tank. Close Water Tank Cap.
4. Follow normal steam ironing procedure. Allow unit to steam out full contents of Water Tank. When finished, turn Continuous Steam Switch to OFF  position and place unit securely on the Base.
5. Allow to cool for 5 minutes, then refill Water Tank with fresh distilled water. Repeat STEP 4 until vinegar odor dissipates.
6. Store unit as normal.

 **CAUTION: Burn Hazard.** Using tap water could result in mineral buildup which could block the steam outlets, causing this unit to spit or spurt hot water. Follow cleaning instructions provided.

# TROUBLESHOOTING

PROBLEM	POSSIBLE CAUSE & SOLUTION
Unit fails to heat up.	Base is not plugged in. Plug power cord into electrical outlet.
	Household circuit breaker / ground fault interrupter has tripped or blown a fuse. Reset circuit breaker / ground fault interrupter, or replace fuse. For assistance, contact a licensed electrician.
	Temperature Control Dial has not been turned to a heat setting.
Unit is leaking water.	The Continuous Steam Switch is in this  position, but Temperature Control Dial is not set to high enough heat setting. Refer to Steam Ironing section for further instructions.
	Water tank is overfilled. Do not fill past MAX line.
	There is mineral build-up. Refer to MINERAL BUILD-UP section for further instructions.
Unit is not producing continuous steam	The Continuous Steam Switch is not set in the correct position. Ensure it is set to  position.
	The Temperature Control Dial is not set to high enough heat. Refer to Steam Ironing section for further instructions.
	The Cordless Iron has been left off the base for more than 30 seconds. Place iron back on the base and wait for 7 seconds for reheat.

# WARRANTY

---

Steamfast, a division of Vornado Air, LLC. Steamfast warrants to the original consumer or purchaser this Steamfast ("Product") is free from defects in material or workmanship for a period of two (2) years from the date of purchase. If any such defect is discovered within the warranty period, Vornado, at its discretion, will repair or replace the Product at no cost.

For warranty service: Call 1-800-711-6617 or email [consumerservice@steamfast.com](mailto:consumerservice@steamfast.com) to obtain a Return Authorization ("RA"). Please have or include your Product's model number and serial number, as well as your name, address, city, state, Zip code, email, and phone number when contacting Vornado for warranty service. To file a contactless warranty claim, visit [www.steamfast.com/contact](http://www.steamfast.com/contact)


After receiving the RA, ship your Product to: Vornado Air LLC Attn: Warranty & Repair 415 East 13th Street, Andover, KS 67002. For your convenience, please have your model number and serial number when contacting Vornado with service inquiries. To ensure proper handling, packages must be clearly marked with the RA number. Packages not clearly marked with the RA number may be refused at the receiving dock. Please allow 2–3 weeks for warranty service and return of your Product after the Product is received.

This warranty does not apply to defects resulting from abuse of the Product, modification, alteration, mishandling, improper maintenance, commercial use or repair or service of the Product by anyone other than Vornado; damages which occur in shipment or are attributed to acts of God. Improper product use, which includes using an external device that alters or converts the voltage or frequency of electricity, or shipping a Vornado product to a country not intended for use will void all warranties. Any unauthorized product modification, repair by unauthorized repair center or use of non-approved replacement parts is not recommended and any consequences will not be covered by support services or product warranties.

The product warranty will be honored only on models that are being used in the country intended. REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER. VORNADO SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT. EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED IN DURATION TO THE DURATION OF THIS WARRANTY. Some states do not allow the exclusion or limitation of incidental or consequential damages, or allow limitations on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may have other rights that vary from state to state. The manufacturer assumes no responsibility for damage or injury caused by failure to follow these instructions, improper product use or unauthorized product modifications. Any such actions will invalidate the product warranty.

All company names and product names are trademarks of their respective owners. ©All rights reserved. All technical information, data and instructions for the installation, connection and operation contained in these instructions for use correspond to the latest available information at time of printing. The contents of this manual may differ slightly from the actual product. Observe any additional supplements.

© 2023 Vornado Air, LLC. Andover, KS 67002, U.S. Specifications subject to change without notice. Steamfast® is a trademark owned by Vornado Air, LLC. Manufactured in China.

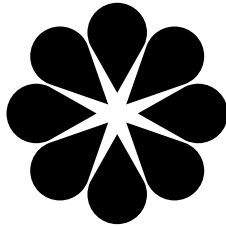

**Steamfast<sup>TM</sup>**

1-800-711-6617 | [steamfast.com](http://steamfast.com) | [consumerservice@steamfast.com](mailto:consumerservice@steamfast.com)